


Accu-CT[®] ACT-1250 Series

Split-Core Current Transformer Installation Guide

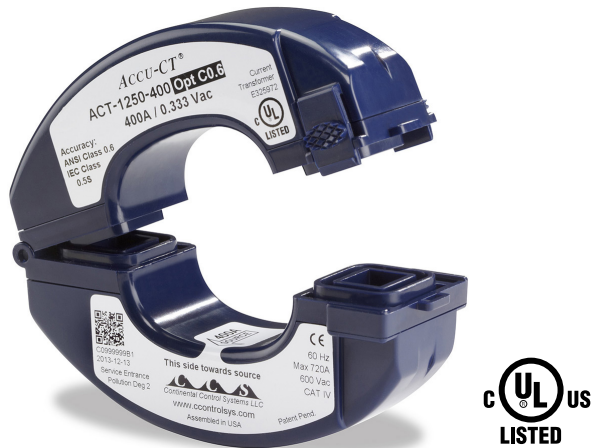

Danger: Hazardous Voltages

Potential shock hazard from dangerous high voltage exists.

The ACT-1250 series Accu-CT current transformers measure AC line current in circuits up to 600 Vac and nominal currents up to 600 Amps. They are split-core (opening) for ease of installation.

They may be field installed within distribution and control equipment such as panelboards, switchboards, industrial control equipment, and energy-monitoring/management equipment, to measure current on the service entrance or branch circuit conductors.

The Accu-CT is used with electric energy meters, like the WattNode meters, or for other current monitoring purposes.

Precautions

- Only qualified personnel or **licensed electricians** should install the current transformer (CT). The line voltages of 120 Vac to 600 Vac can be lethal!
- Install in accordance with ANSI/NFPA 70, "National Electrical Code" (NEC). Follow all local electrical codes.
- Electrical codes prohibit installation of CTs in equipment where they exceed 75% of the wiring space of any cross-sectional area.
- Do not install CTs where they block ventilation openings.
- Do not install CTs in the area of breaker arc venting.
- The Accu-CT lead wires are considered Class 1 wiring (as defined by the NEC) and must be installed accordingly. They are not suitable for Class 2 wiring methods and should not be connected to Class 2 equipment.
- Verify that the line currents will not exceed the 720 amp maximum rating under normal operation.
- Do not install the CT where it may be exposed to temperatures below -30°C or above 75°C (-22°F to 167°F), excessive moisture, dust, salt spray, or other contamination.
- The Accu-CT can be damaged by sharp impacts or by being dropped. This can result in reduced accuracy.

- The current transformer cannot measure direct current (DC), and DC will degrade the AC accuracy.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Pre-Installation Checklist


- The CT's rated current should normally be greater than or equal to the maximum current of the measured circuit. Ensure that the fuse or circuit breaker's rating does not exceed the CT's maximum continuous current rating.
- It is preferable to install the CT and meter or monitoring device close to each other. However, you may extend the CT wires by 300 feet (100 m) or more by using shielded twisted-pair cable and by running the CT wires away from high current and line voltage conductors.
- For highest accuracy, try to separate the CTs on different phases by 1 inch (25 mm) to minimize magnetic interference.

Connecting the Current Transformer

- WARNING:** To reduce the risk of electric shock, always open or disconnect the circuit from power-distribution system (or service) of building before installing or servicing current transformers.
- Point the SOURCE arrow toward the current source: the utility meter or the circuit breaker for branch circuits.
Note: If the CT is mounted backwards, the measured power will be negative.
- To open the CT, squeeze the knurled panels and pull / rotate the top open.
- Make sure the mating surfaces are clean. Debris will increase the gap, decreasing accuracy.
- Place the CT around the conductor and close the CT.
- Optional:** Secure the CT to the conductor with a cable tie.
- Optional:** For added security, wrap a cable tie around the outside of the CT or through the loops at the front of the CT.
- Route the twisted black and white wires from the CT to the meter or monitoring device. **Be sure to route conductors so that they do not directly contact live terminals or busses.**
- Connect the white and black wires to the terminals on the meter or monitoring device.

Note: If the white and black wires are reversed on a meter, the measured power will be negative.

Note: For the WattNode meter, align the white wire with the white dot on the label, and the black wire with the black dot.

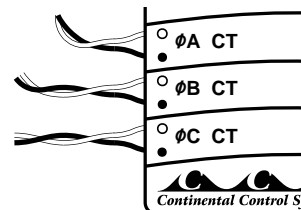

Note: Be careful to match the CT to the voltage phases being measured. Make sure the ØA CT is measuring the current on the ØA conductor, and the same for phases B and C. Use colored labels or tape to identify the wires.

References

For more information about current transformers, see:
http://www.ccontrols.com/w/Category:Current_Transformer

For more information about connecting current transformers to WattNode meters, see the appropriate WattNode meter manual.

Specifications

Model	Rated Current
ACT-1250-250	250 A
ACT-1250-400	400 A
ACT-1250-600	600 A

Ratings

Overvoltage and Measurement Category:

600 Vac, CAT IV (service entrance) for pollution degree 2
250 Vac, CAT III for pollution degree 3

Maximum Continuous Current: 720 Amps (maximum continuous current the CT can sustain without overheating).

Line Frequency: 50 to 60 Hz

Secondary (Output) Voltage at Rated Amps: 0.33333 Vac

Optional: 1.000 Vac (add "Opt 1V" to the model number)

Optional: 100 mA or 1 A output. Contact sales for details.

Environmental

Operating Temperature: -30°C to +75°C (-22°F to 167°F)

Altitude: up to 3000 m (9840 feet)

Operating Humidity: 5 to 95% relative humidity (RH)

Pollution Degree:

2 (controlled environment) for CAT IV, 600 Vac
3 (harsh environment) for CAT III, 250 Vac

Indoor Use: Suitable for indoor use.

Outdoor Use: Suitable for outdoor use when mounted in a NEMA 3R or 4 (IP 66) rated enclosure, provided the ambient temperature will not exceed 75°C (167°F).

Electrical

Accuracy:

See <http://www.ccontrols.com/w/ACT-1250> or the datasheet for detailed accuracy specifications.

Type: Voltage output, integral burden resistor

Protection: output clamped at 6 Vac by zener diode

Lead Wire: 2.4 m (8 feet), 18 AWG

Optional: up to 30 m (100 feet)

UL Listing: UL 2808, XOMA, UL file number E363660

cUL Listing: CAN/CSA C22.1 No. 61010-1, XOMA7, E363660


CE: Pending for IEC 60044-1

Mechanical

Outside Dimensions: 4.50 in x 3.30 in x 1.58 in (114 mm x 83.4 mm x 40.2 mm)

Conductor Opening: modified ellipse 1.83 in x 1.26 in (46.5 mm x 32 mm)

Weight: 13.9 oz (395 gm)

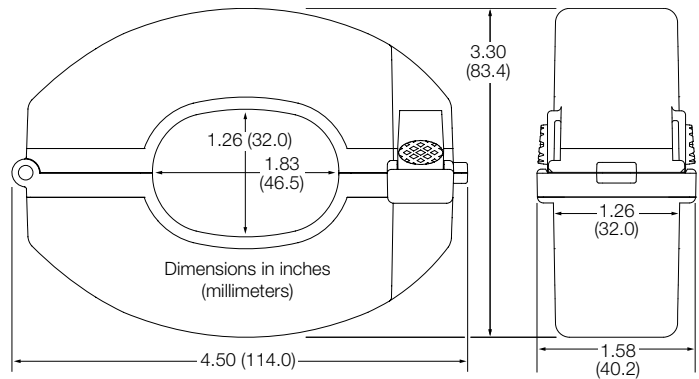

Warranty

All products sold by Continental Control Systems, LLC (CCS) are guaranteed against defects in material and workmanship for a period of five years from the original date of shipment. CCS's responsibility is limited to repair, replacement, or refund, any of which may be selected by CCS at its sole discretion. CCS reserves the right to substitute functionally equivalent new or serviceable used parts.

This warranty covers only defects arising under normal use and does not include malfunctions or failures resulting from: misuse, neglect, improper application, improper installation, water damage, acts of nature, lightning, product modifications, alterations or repairs by anyone other than CCS.

Except as set forth herein, CCS makes no warranties, expressed or implied, and CCS disclaims and negates all other warranties, including without limitation, implied warranties of merchantability and fitness for a particular purpose.

Limitation of Liability

In no event shall CCS be liable for any indirect, special, incidental, punitive or consequential damages of any kind or nature arising out of the sale or use of its products whether such liability is asserted on the basis of contract, tort or otherwise, including without limitation, lost profits, even if CCS has been advised of the possibility of such damages.

Customer acknowledges that CCS's aggregate liability to Customer relating to or arising out of the sale or use of CCS's products, whether such liability is asserted on the basis of contract, tort or otherwise, shall not exceed the purchase price paid by Customer for the products in respect of which damages are claimed. Customer specifically acknowledges that CCS's price for the products is based upon the limitations of CCS's liability set forth herein.

OneTemp[®] Pty Ltd
MEASURE | CONTROL | RECORD
www.onetemp.com.au
1300 768 887

3131 Indian Rd.
Boulder, CO 80301
303) 444-7422
<http://www.ccontrols.com>
Revision Date: March 13, 2015


Continental Control Systems LLC

©2014-2015 Continental Control Systems, LLC
Accu-CT[®] and WattNode[®] are registered trademarks of Continental Control Systems, LLC.